




# WINDOW DEFLECTORS FOR INEOS GRENADIER

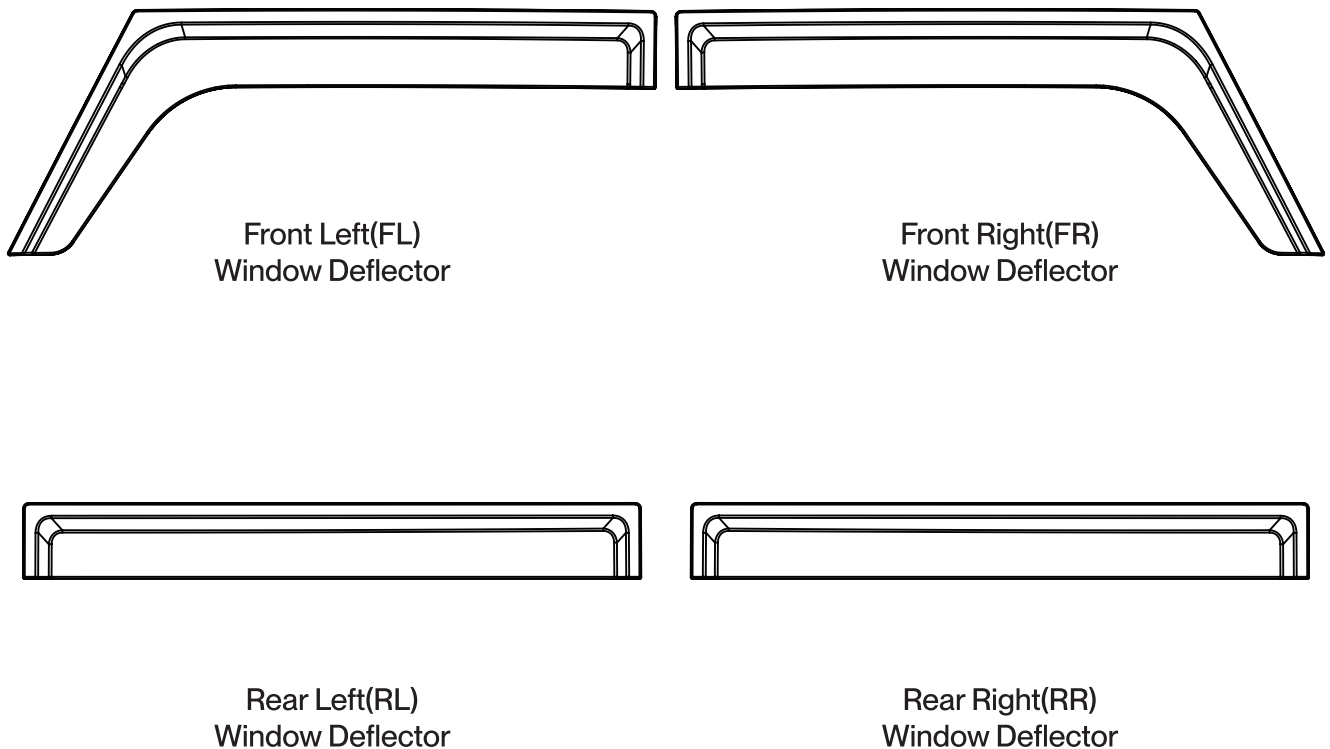


## Important Safety Information


- **CAUTION:** Ensure the deflector is secured to the door frame before driving.
- To prevent damage, avoid brush-style car washes. Use mild soap and water only.
- Check deflector adhesion periodically.

## Preparation Before Installation


- Trial fit recommended.
- Clean and dry the door frame surface thoroughly. The deflector attaches to the door frame above the door on the INEOS Grenadier.
- **NOTE:** Actual application may vary slightly from illustrations.

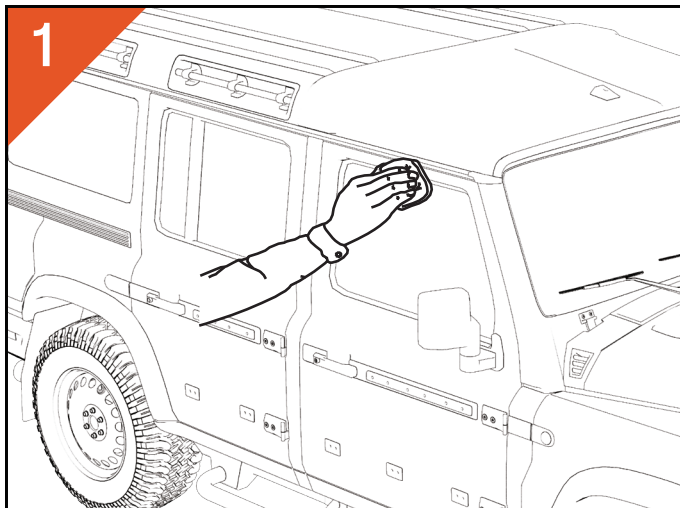


Clean the surface of the door frame above the window where the visor will mount with an alcohol pad.

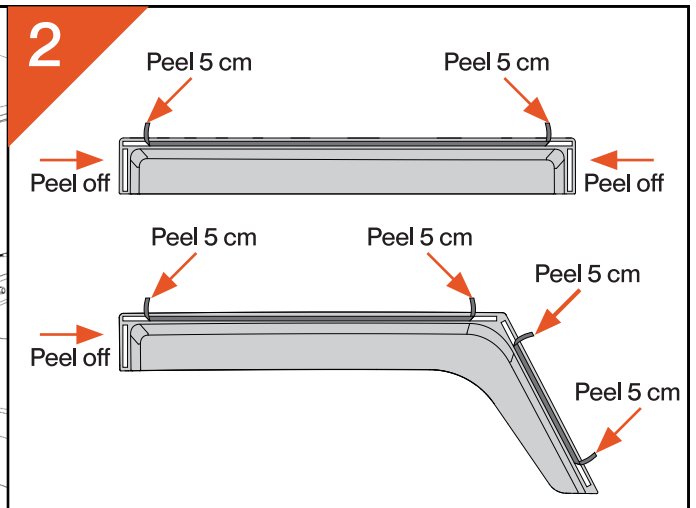


Following the arrow prompts in the illustration, remove the 3M tape liner from the Window Deflector.

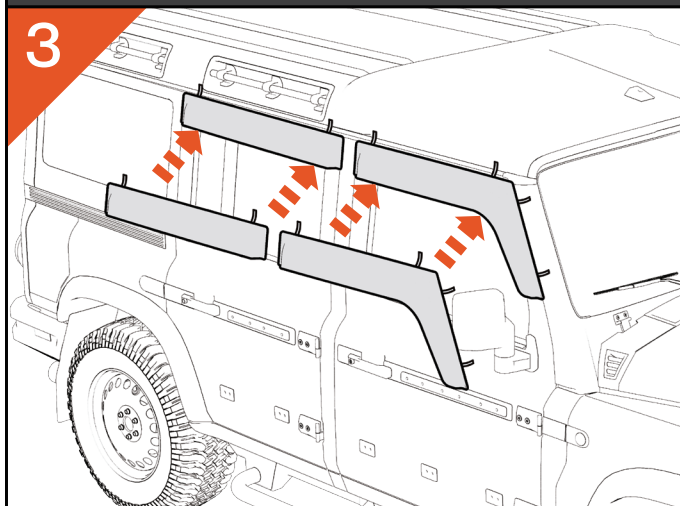


Align the Window Deflector with the cleaned surface on the door frame. Ensure the visor is properly aligned along the door frame above the window.

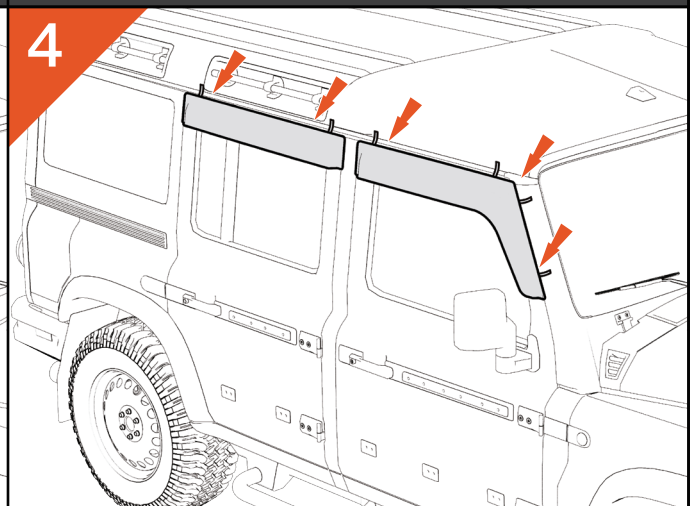

Press the exposed area of 3M tape against the door frame and verify the position. Open the door to ensure the visor does not obstruct door opening or closing.

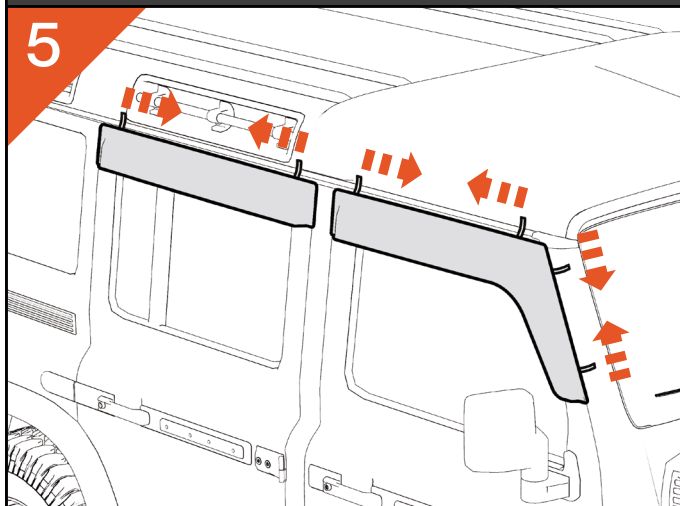

With the visor in its final position, remove the remaining 3M tape liner by pulling on the free ends.

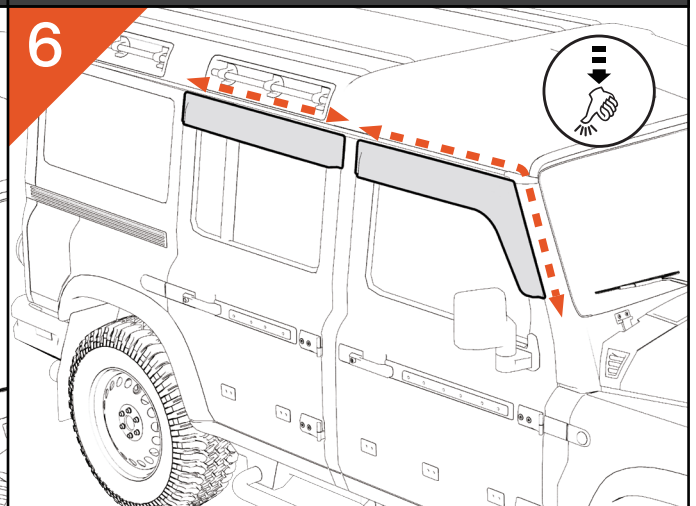

Press along visor flanges to ensure proper adhesion of the 3M tape to the door frame.

► Repeat steps 1-6 to complete the installation on the remaining windows.