

INSTALLATION INSTRUCTIONS
FOR LC250 - A-PILLAR SPOTLIGHT BRACKET

1.

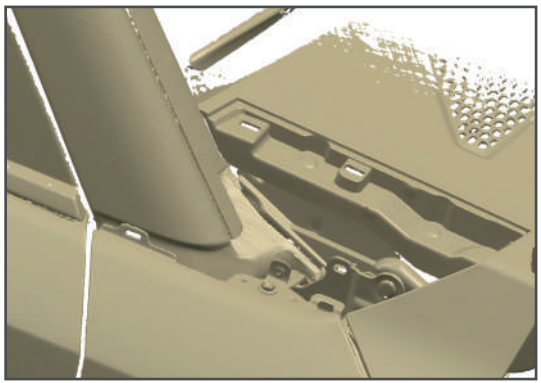

Remove the original vehicle A-pillar trim cover to the state shown in the figure.

3.

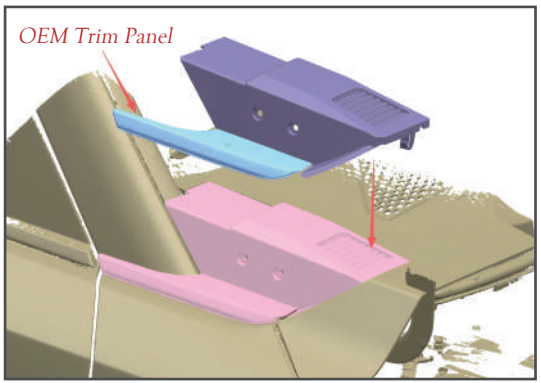


Take the original small trim panel (blue component shown in the figure) and the purple trim panel, then snap/clip them together onto the vehicle body.

2.





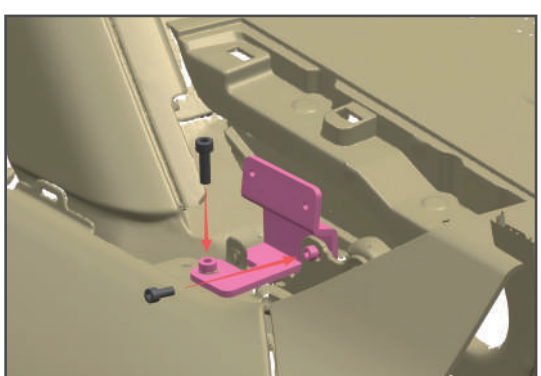

Secure the iron bracket (as shown in the figure).

4.






Secure the main bracket assembly (as shown in the figure).

5.



M4X10
SHCS

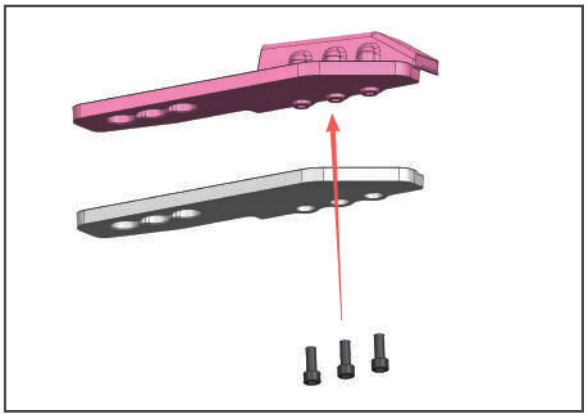


Secure the side bracket assembly (as shown in the figure).

6.



M5X20
SHCS

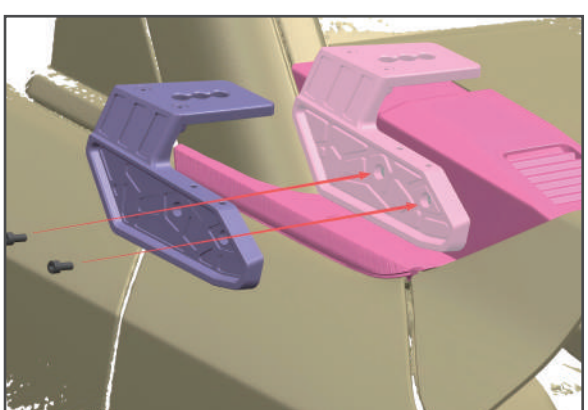


Install the main spotlight bracket (as shown in the figure).

7.



M5X10
CSK

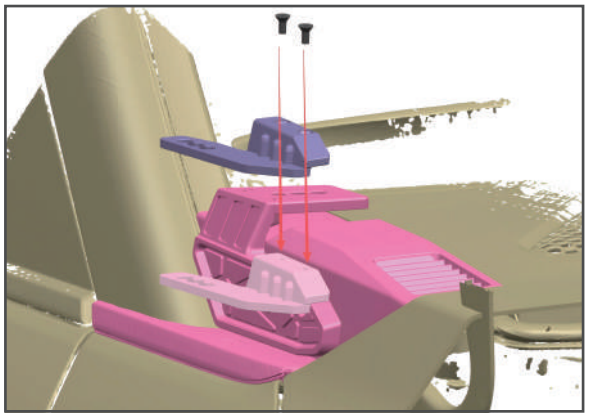

Install the side bracket assembly (as shown in the figure).

Note:
Installation for the opposite side follows the exact same steps.
(This product includes the mounting brackets only;
spotlights are not included.)