



INSTALLATION GUIDE FOR D-PILLAR MODULAR STORAGE PANEL

1. REMOVE TRIM PIECES

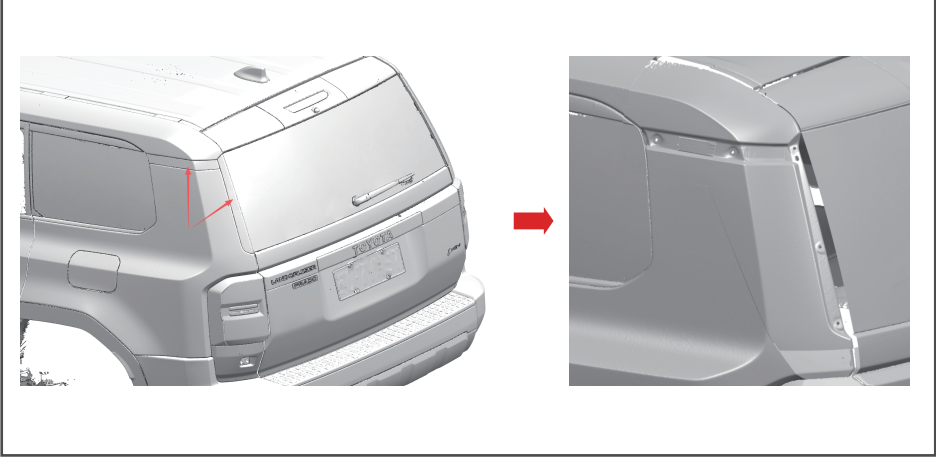


Remove the two decorative trim pieces on the original D-pillar.
(As shown in the figure)

2. INSTALL RIVET NUTS

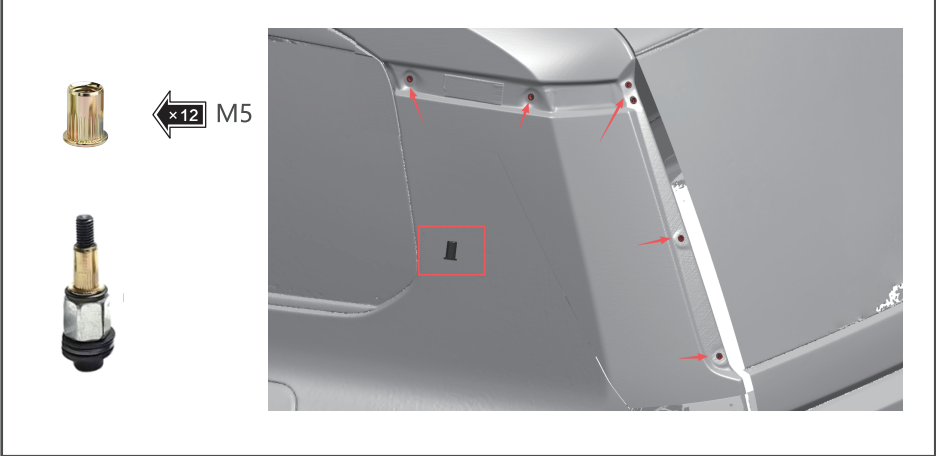


Use a riveting tool to install six M5 rivet nuts.
(As shown in the figure)

3. SECURE HANDLE BASE

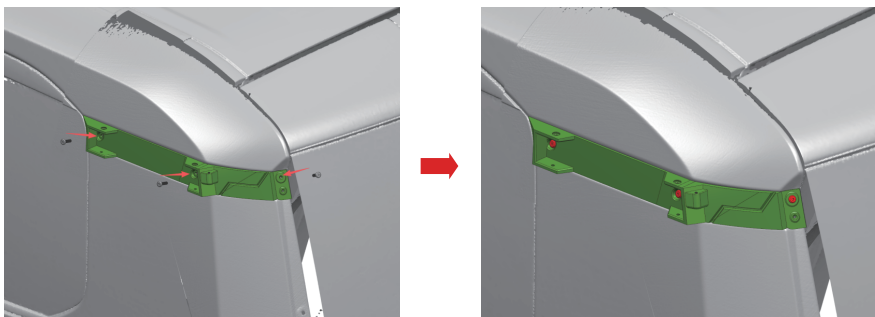

Fix the handle base using M5×22 flat head screws.
(As shown in the figure)

4. INSTALL HANDLE

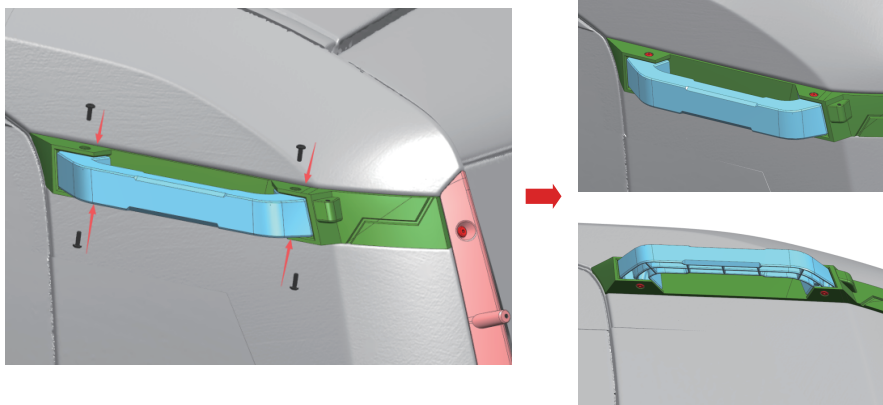


Secure the handle using M4×12 flat head screws.
(As shown in the figure)

5. SECURE ADHESIVE BASE



Fix the net mounting adhesive base using M4×12 flat head screws.
(As shown in the figure)

6. NET INSTALLATION & BONDING

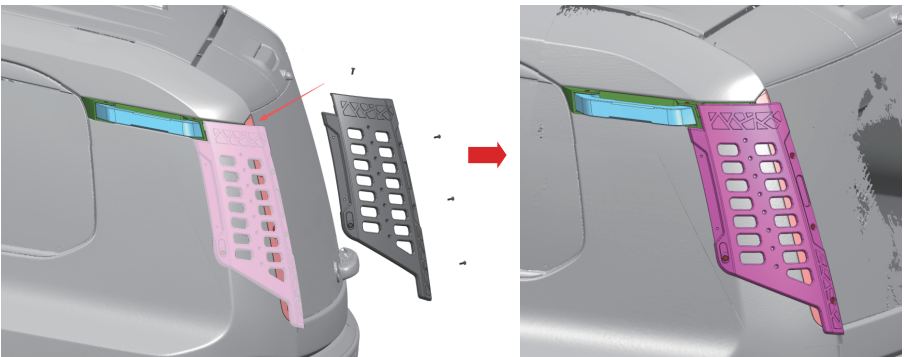

Secure the cargo net with M4×12 flat head screws, and firmly bond the double-sided tape of the adhesive base to the vehicle body.
(As shown in the figure)

7. APPLY EMBLEM



Finally, apply the aluminum emblem.
(As shown in the figure)

ATTENTION:
INSTALLATION FOR THE OPPOSITE SIDE FOLLOWS THE EXACT SAME STEPS.