



REARVIEW MIRROR COVER ASSEMBLY INSTRUCTIONS

1. FRAME PRE-ASSEMBLY

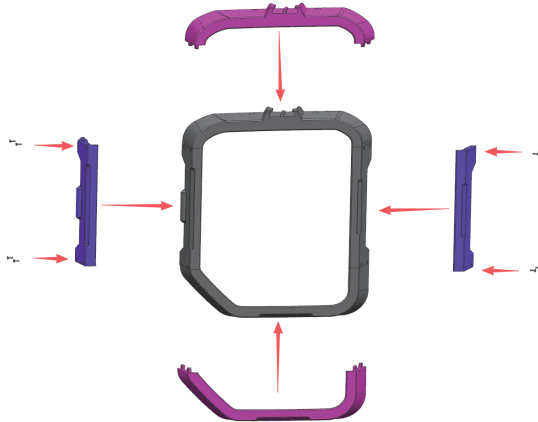

Connect the mirror frame components using four M2×5 countersunk screws. Keep the screws half-loose to allow for alignment adjustments. (As shown in the figure)

2. MOUNT FRAME

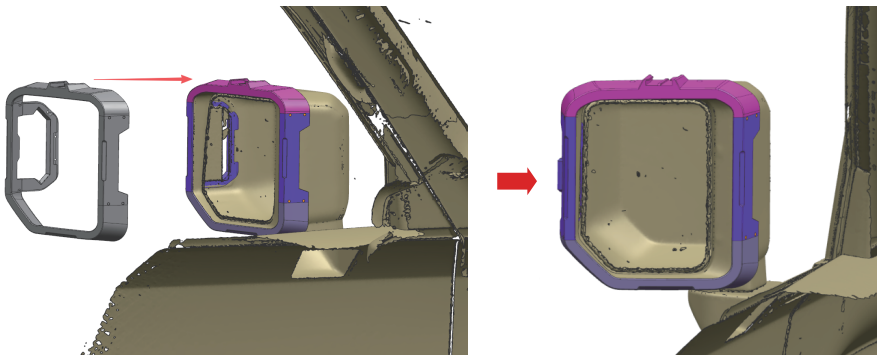


Fit the pre-assembled frame onto the edge of the original rearview mirror. (As shown in the figure)

3. ADHESIVE PRE-INSTALLATION



Peel off the protective film from the double-sided tape on the rear of the mirror cover. Perform pre-alignment before final bonding.
(As shown in the figure)

4. FINAL SECURING & TIGHTENING

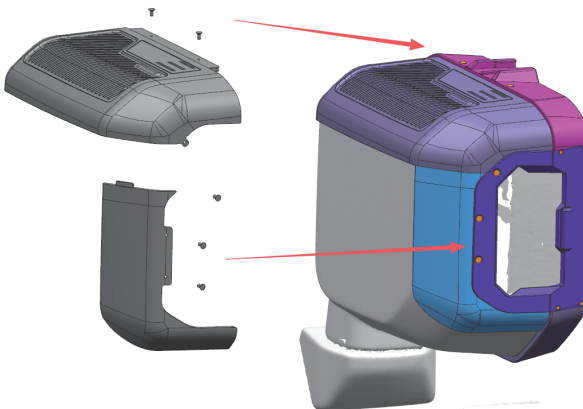

Fasten the mirror cover using M3×5 countersunk screws, then fully tighten all screws to ensure a secure fit.
(As shown in the figure)

ATTENTION:
INSTALLATION FOR THE OPPOSITE SIDE FOLLOWS THE EXACT SAME STEPS.