

Instructions For Bonnet Gas Strut

机盖气动撑杆说明书

1.



副驾侧(R)




主驾侧(L)

Reuse the original vehicle screws.

安装使用原车螺丝。


2.

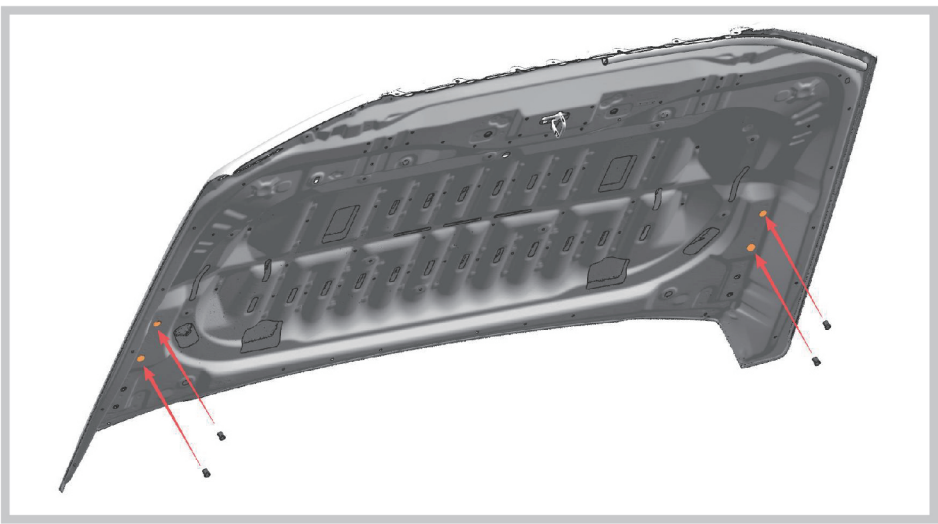

As shown in the diagram, install 4 pieces of M6 rivet nuts.

图示位置安装4颗M6拉铆螺母。


3.

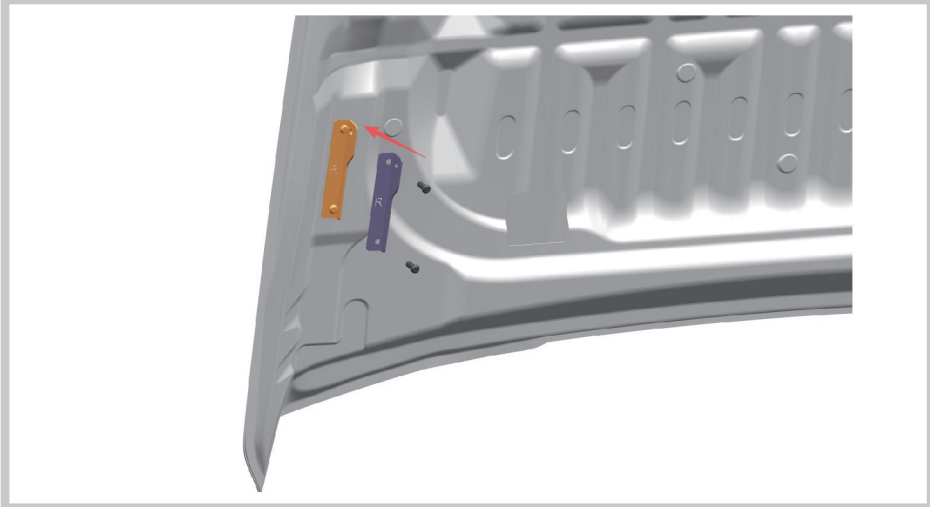

Use M6*18 screws to secure the bracket to the rivet nuts, ensuring symmetrical installation on both sides.


M6*18螺丝，固定支架于拉铆处左右安装一致。

4.

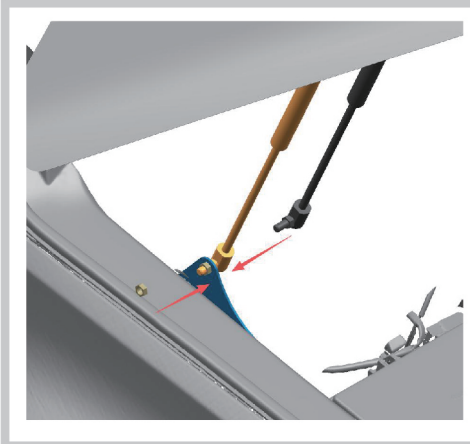

Secure the lower mounting point of the gas spring (passenger side), ensuring symmetrical installation on both sides.

固定气弹簧下安装位(副驾驶侧)左右安装一致。

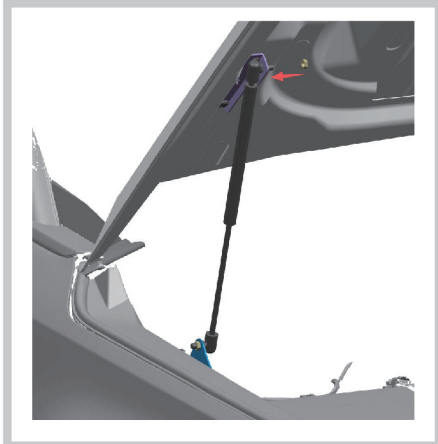

Secure the upper mounting point of the gas spring (passenger side), ensuring symmetrical installation on both sides.

固定气弹簧上安装位(副驾驶侧)左右安装一致。