



REAR TAIL LIGHT FRAME ASSEMBLY INSTRUCTIONS

1. COMPONENT PRE-ASSEMBLY

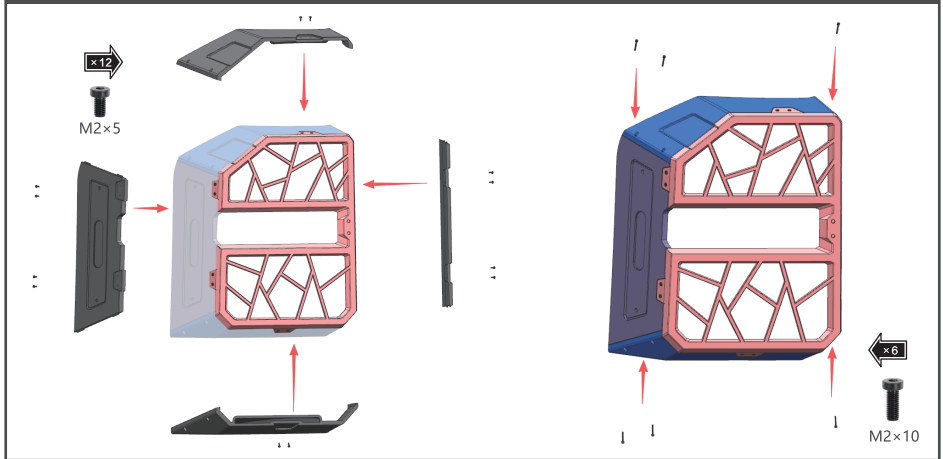


Secure the 4 components of the tail light frame using Allen screws.
Keep the screws half-loose to allow for later adjustment.
(As shown in the figure)

2. ADHESIVE PRE-INSTALLATION

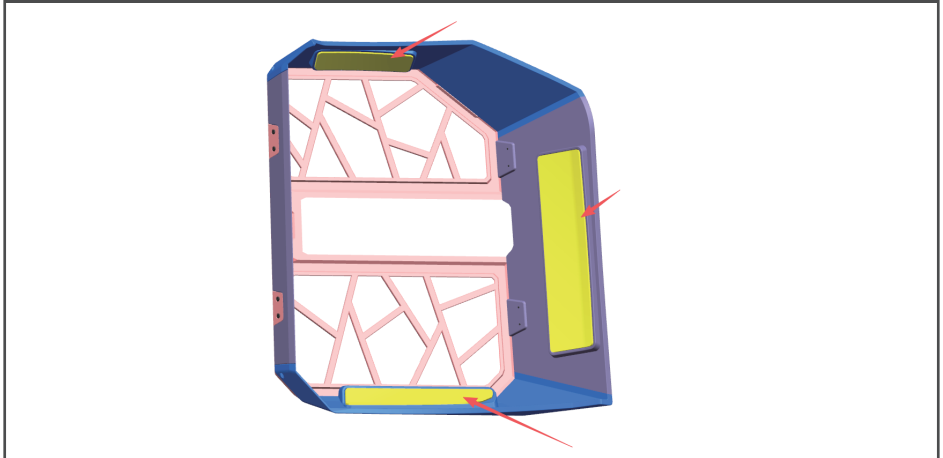


Peel off the double-sided tape backing on the rear of the frame.
Perform pre-alignment before final bonding.
(As shown in the figure)

3. MOUNTING & TIGHTENING

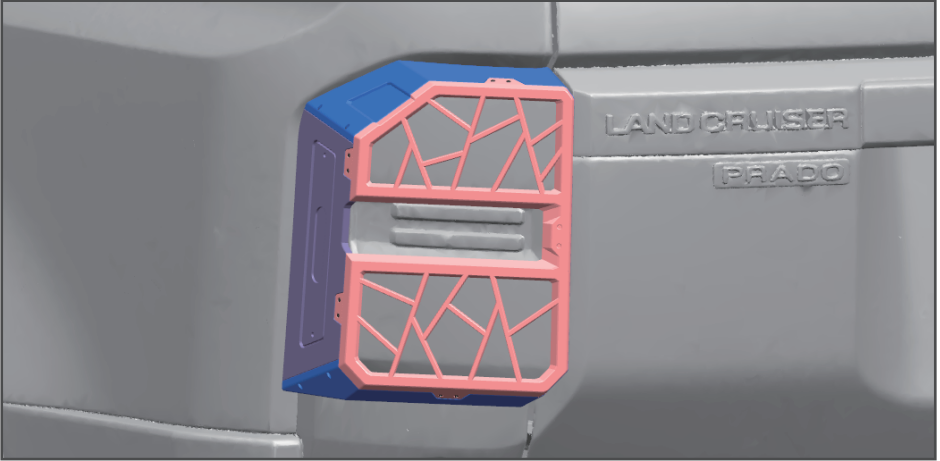

Fit the frame onto the tail light, press firmly to ensure the tape is securely bonded, and then fully tighten all screws.
(As shown in the figure)

4. APPLY EMBLEM

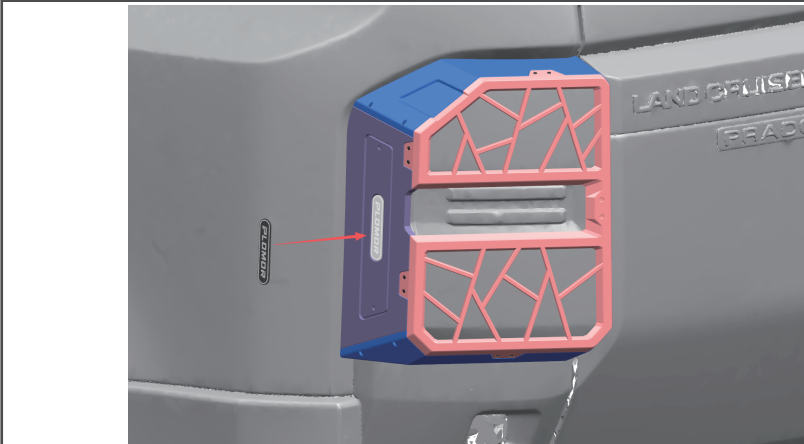

Finally, apply the aluminum emblem to the designated area on the side.
(As shown in the figure)

ATTENTION:
INSTALLATION FOR THE OPPOSITE SIDE FOLLOWS THE EXACT SAME STEPS.